

CONTROL PANEL DG-10

Harris Race Radios

STANDARD COMMANDS

Driver Volume

Press the first time: the display blinks and shows the pre-set volume, the other press changes the volume.

Telephone call control

Press the green for 2 seconds to start a phone call, press the red for 2 seconds to close it.

To adjust the telephone volume.

Green short press: the right display blinks and shows the pre-set volume. Press Co-driver + and - to adjust the phone volume also during a call. This operation doesn't effect the intercom volumes.

Left display

When any button is pressed the display shows:
 '≡' for Stage mode,
 'r' for Road mode

Right display

When any button is pressed the display shows the setting of cancellation mode (0..3)

Co-Driver Volume

Press the first time: the display blinks and shows the pre-set volume, the other press changes the volume.



Digital active noise cancellation mode

Press the first time: the left display shows 'd', and the right display shows the pre-set noise cancellation mode.
 0 = digital cancellation off.
 1 = digital cancellation minimum
 2 = digital cancellation medium
 3 = digital cancellation maximum

The second press changes the noise cancellation mode (0..3).

Stage/Road

A short press changes between Stage and Road mode.

	Stage	Road (2)
Intercom	Active	Active
Videocamera OUT	Active	Active
Radio	NO	Active
Phone	NO	Active

RCA OUT (Red)

Camera connection

RCA IN (White)

Radio connection

ADVANCED COMMANDS

Camera/Radio out gain

Press '+' for about 3 seconds in order to activate "Camera/Radio out gain setting", then shortly press driver "+" or "-" for adjust the gain.

Left display

'r' = Road mode selection
 'C' = Camera/Radio out gain setting
 't' = Telephone volume setting
 'b' = Bluetooth audio out setting

Right display

When you enter in any configuration mode, it blinks showing the value to set

Bluetooth audio out

Press '+' for about 3 seconds in order to activate "Bluetooth audio out setting", then shortly press driver "+" or "-" for adjust the gain.

Intercom standby

Press '-' for about 3 seconds in order to switch intercom in standby mode.
 Press any button about 1 second for turn on the intercom.

Intercom standby

Press '-' for about 3 seconds in order to switch intercom in standby mode.
 Press any button about 1 second for turn on the intercom.

Power supply

The intercom turns on supplying voltage to the power cable ('+' red, '-' black) Range 10-30 Volt. It is recommended that you connect the intercom using the car main switch or a dedicated switch.

Road Mode Selection

Push down it about 2 seconds in order to activate "Road mode selection", then shortly press it for switch between:

- "Road Mode 1" = Driver doesn't receive radio and phone communications, co-driver does it.
- "Road Mode 2" = Both Driver and co-driver receive radio and phone communications.

CONTROL PANEL DG-10

BLUETOOTH COMMANDS

Bluetooth Turn-on

Normally the Bluetooth auto turns-on together with the intercom. It is possible to switch-on the Bluetooth by pressing the green button for about 5 seconds (if the Bluetooth was previously switched-off).

Bluetooth LED

Slow blink = BT is on and ready for use
Fast blink = BT is in pairing mode
Off = BT is off

Bluetooth Turn-off

Press the red button for about 5 seconds (until the blue LED is steady) in order to turn-off the Bluetooth system.



Pairing a telephone

1. Press the green button for about 5 seconds (until the blue LED is steady);
2. Blue LED turns-off
3. Press the green for about 7 seconds (until the blue LED starts to blink fast);
4. Look for DG10 Bluetooth system with your phone;
5. If required, enter PIN code "0000".